




www.tehtools.com

High Pressure Washer

TPW4140 TPW4180

To Be Your Exclusive Helper

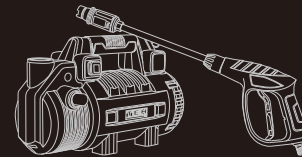

TEH



TECHNICAL SPECIFICATION

Model	TPW4140	TPW4180
Rated voltage	220V	220V
Rated frequency	50Hz	50Hz
Rated input power	1400W	1800W
Maximum flow	7.5L/min	8.5L/min
Allowable pressure	70bar	80bar
Inlet water temperature	0-40°C	0-40°C



Accessories included:

- 1 instruction manual
- 1 inlet pipe
- 1 extension tube
- 1 steel pipe
- 1 water gun


SAFETY WARNING

1. When the machine is used, don't place it on the floor where is much water.
2. When starting the machine, please don't look at the short gun avoid of accident injure.
3. In use, please don't point it any animal and human.
4. This type of machine should be away from the place of corrosive place. It should not be used for pesticide, diluent, Solvent and other Hazardous or corrosive liquid.
5. Please make sure the power is with earth line.
6. Please don't break the wire or drag hard of the wire. Please don't put the wire near the fire or heat reservoir. Be away from the sharp object to do harm to the machine. If there are broken wire somehow, please stop use it immediately and send it to the repair house of us.
7. This product can only be used from 0 ° C to 40 ° C.
8. After finishing each job, cut off power and release the pressure in the machine.
9. Don't let high pressure water pipe be rolled by heavy articles, vehicles or place such pipes near articles with sharp edges or bend them at a large angle but ensure these pipes have a good seal performance when they are connected.
10. This machine only could be used in open outdoor. When it is crowd people, please don't use it.
11. When the high pressure tube or pikestaff have problems, please stop using it.
12. When we pausing using the machine, please open the safety lock(it is located in the back of wrench)
13. The people should not use this machine who doesn't know this product or experience, or the one who is not in good condition, or the children.
14. The water after passing this machine is not used for drinking.

OPERATION INSTRUCTION

After open carton, take out all spare parts.

1. Connect the water inlet tap with the machine, and make it tight connected.
2. Pay attention to screwing the quick coupling and water inlet pipe. Then immerse one end of the water inlet pipe float.
3. Insert the plug of power line with leakage protector into the outlet. If pushing it , the indication light is on. It means connected well. Then turn on the switch.
4. When lots of water comes out from the water inlet, turn off the power switch. (do make the output pipe don't point to people)
5. Connect the high pressure tub & pikestaff with the machine.

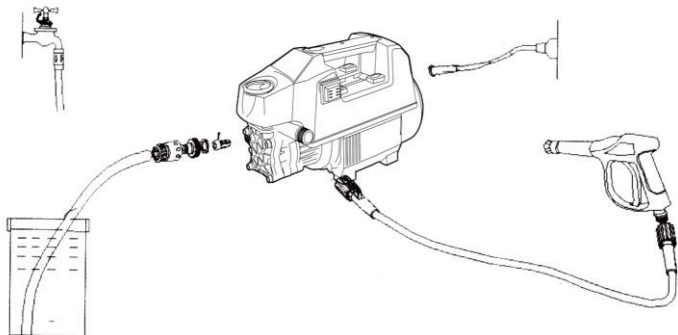

NOTES OR PREVENTIVE MEASURES

When articles are washed. Cleaning should be implemented from top to bottom, the Trajectory according to the articles that need to wash.

Please don't use the machine for a long-time continuous operation, because it would shorten its service life.

The continuous work time should not exceed 2 hours.

Since each machine is tested under its operation, it is normal that there are several drops of water in the machine.

MAINTENANCE

1. This machine is not used for professional and commercial cleaning.
2. After 30days of using after buying this machine, please change the engine oil(international 32# engine oil). After the first 30days use, every 6 months to change the engine oil.
3. When using the machine, please put some butter into the seal ring. Please keep the machine clean. If you don't use the machine in a short time, please dry all the waters in the machine.
4. Please don't use the dirty water to inlet.
5. When the strainer of water inlet tap is with some dirty, please clean it. And check the seal ring of water inlet tab is working or aging.

TROUBLESHOOTING

Fault symptom	Remedy
<p>The machine has poor self-suction function and no water suction for a long time Some reasons may cause it.</p>	<ol style="list-style-type: none"> 1. If the water inlet tab is not sealed, the air is input, it would not self suction. Please also check the inlet pipe. 2. The water is too dirty. It would block the strainer. 3. The high pressure pipes is not twisted off or after turing on machine, the user has not put the trigger. <p>If the high pressure pipe is not twisted from the machine, the suction would be very show. It would also shorten the life of the machine. The correct way is to twist off the high pressure pipe first, and after the output some water, shut the button, and connected the high pressure pipe.</p>
<p>The output of water from pipe suddenly too much or too little It means the output of pikestaff is somehow stocked. The stock would active the overload protection work.</p>	<p>Please put off the electric, and using the cleaning needle to clean it. Do be aware that it may have high pressure water coming out.</p>

<p>The machine is not working.</p>	<ol style="list-style-type: none"> 1. Please check the indicator of the power. Please check the switch is on or off. 2. To check the high pressure pikestaff is frequent or not. 3. To check the button of pressure.(it is in the side of yellow plastic box of pressure meter). <p>Do cut off the electric, and check the limitation button is normal or not.</p>
<p>The machine can't stop.</p>	<ol style="list-style-type: none"> 1. To check the removable possible caused for the foregoing problems one by one. To check the switch is available or not 2. To check the valve of pressure is normal or not. If having some dirty, fetch it out. Please also check the seal ring and the spring of distance.
<p>The Shock and numbness in the high pressure pipe after starting use.</p>	<ol style="list-style-type: none"> 1. There is some air coming into the seal ring. 2. There are some dirt thing stocked the strainer, it makes the water could not frequently coming out. 3. There is something getting into the valve. And it makes the valve working abnormal.

WARRANTY CARD

Dear customers, the warranty service for purchasing TEH products is as follows:

Under normal use, within one years from the date of purchase. It is guaranteed that the damage is caused by the quality of the tool.

The following conditions occur during the warranty period, not covered by the warranty:

- a. Any valid legal document (single ticket) certifying the date of purchase
- b. Any damage caused by natural wear and overload
- c. Any damage caused by the use of low-priced inferior accessories
- d. Any damage caused by improper carrying, transportation or storage
- e. Any product that has been opened, repaired, replaced, or modified by itself
- f. Any damage caused by misuse, beyond the scope of use of the tool, and failure to use and maintain in accordance with the instructions

 ladies/gentlemen: _____ employer: _____

contact number: _____ fax number: _____

contact address: _____

warranty record: _____

post code: _____

IMPORTANT NOTE

1. The invoice and warranty card must be presented at the time of warranty.
2. The fuselage number on the invoice is the same as the fuselage number on the warranty card.
3. Once this warranty card is issued, if it is lost, it will not be reissued. Please keep it properly.

Note: The company reserves the right to amend the above provisions and has the final interpretation right in the case that the warranty service does not violate national laws.